


Refit the gearbox at this stage. It is possible to install the mid-mount without removing the gearbox, though access is easier without it fitted.




Temporarily install the mid-mount using the supplied bolts.

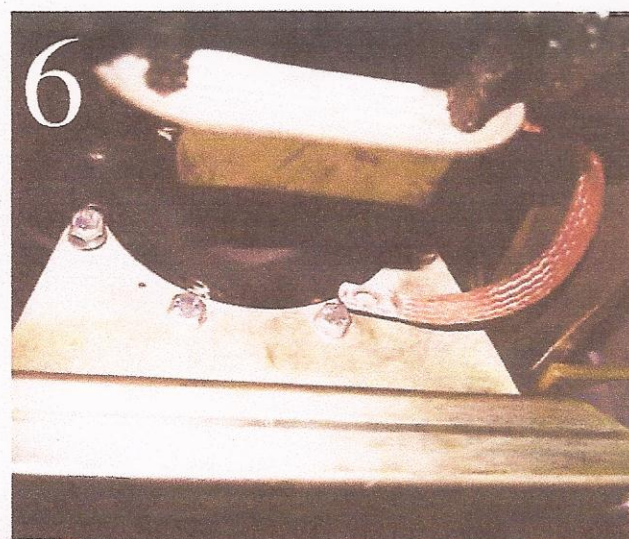

Mark the chassis where the weld-in brackets meet the frame horns.



Remove the mid-mount, clean the marked surface of all paint and rust. Then refit the mid-mount and tack weld the bracket in position. Remove the mid-mount for a final time to protect the rubber section. Weld brackets to underside of the frame horns.

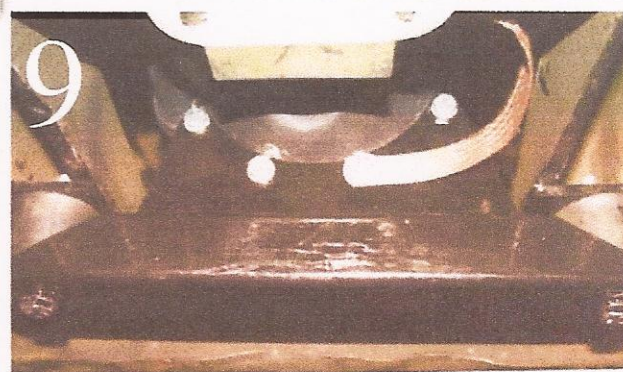

Once cleaned and painted, the mid-mount can be fully installed, not forgetting the earth strap

Originally created for fast bugs, these are now available specifically for buses. The version shown here is manufactured here in the UK. Price is £55, plus postage within mainland UK £7. Two different versions cover the standard IRS / Straight Axle setup and the Creative Engineering IRS frame horn system. To order one contact Simon on 07734807835 or buttsworth@live.co.uk